## DishTemp<sup>®</sup> Blue Operating Instructions

- 1. Single press 🕁 to turn on, hold for 3 seconds 🕁 to turn off.
- 2. Power unit off to reset MAX TEMP reading before each use.
- 3. Position DishTemp with other dishware at start of cycle.
- 4. Make note of MAX TEMP reading at the end of cycle before powering off.
- 5. Press and hold 0 for 5 seconds with the unit turned off to switch from °F to °C.

## **Cautions/Tips:**

Do not expose DishTemp to temperatures above 200°F (93°C). Replace battery with CR2032 coin cell when low battery 💢 indicator illuminates. Carefully reposition battery gasket when replacing battery. Turn off when not in use to conserve battery power.



thermoworks.com | 801-756-7705 | techsupport@thermoworks.com