Operating Instructions

IR-Pocket Infrared Thermometer

The thermometer is a non-contact infrared thermometer

USE:

Simply aim the thermometer at the target with the probe and press the Meas. button to display the surface temperature.

The distance to target diameter ratio (Distance:Spot) is 1:1 therefore the device should be positioned as close to the target as possible.

°C/°F:

The temperature unit can be changed from °C to °F by pressing the selection button on the back.

Battery Replacement:



When the battery icon flashes in the LCD, the battery is low and should be replaced. Confirm the unit is powered OFF, loosen the cover in a counterclockwise direction and replace the two LR44 1.5v cell batteries.

** Dispose of used battery properly and keep away from children.

Measurement Range: -27.4 to 230°F (-33 to 110°C)
Operating Range: 32 to 122°F (0 to 50°C)

Operating Range: 32 to 122°F (0 to 50°C)
Storage Range: -4 to 149°F (-20 to 65°C)

Accuracy (Tamb=23±3°C): -27.4 to 32°F (-33 to 0°C): ±4.5°F+0.05°F per degree below 32°F

(2.5°C+0.05°C per degree below 0°C)

32 to 230°F (0 to 110°C): ±2.5% of reading or 4.5°F (2.5°C)

whichever is greater

0.5°F (0.2°C) from -9.9 to 199.9°F/°C, otherwise 1°F/°C

Response Time (90%): 1 sec.


Resolution:

T (000)

lesponse fille (90%).

Emissivity Range: 0.95 fixed

Auto-off: 15 sec.

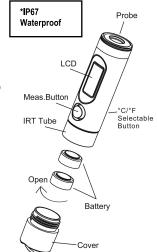



ThermoWorks, Inc. Utah, U.S.A Ph: 801-756-7705 Fax: 801-756-8948 www.thermoworks.com

ThermoWorks