

# RH SPOT™

## Operating Instructions






---

### **What's included:**

RH SPOT, battery, metal mounting plate w/adhesive backing and this instruction card.

### **How to operate:**

RH SPOT is an ambient temperature and humidity thermometer, primarily used to track temperatures and humidity over time. It is not an instant-read thermometer. Display will change between temperature and humidity every 5 seconds.

- To power on RH SPOT, press  once.
- To activate backlight, press . Backlight stays on for 10 seconds.
- To power off RH SPOT, press and hold  for 5 seconds.
- Press and hold  for 3 seconds, MAX temperature will show in the display. Press again, MIN temperature will show in the display. Press again, MAX humidity will show in the display. Press again to view MIN humidity.
- To switch from °F to °C, press and hold  for 5 seconds upon start up.

### **To Change Battery:**

- Replace with 3-volt, CR2032 button cell battery. Use a phillips screwdriver to open the battery cover on the bottom. Install the battery according to the correct polarity, positive side up. Sliding the battery under the metal clip. Reattach the battery cover.

**For service or warranty:**

**385-330-0591**

**[techsupport@thermoworks.com](mailto:techsupport@thermoworks.com)**

# Important Humidity Ranges

---

## **Normal Room Range**

30 to 60%

## **Cheese Cave Range**

75 to 99%

## **Wine Storage**

50 to 70%

## **Bread Proofing Range**

80 to 85%

## **Terrarium Range**

Above 50%

## **Humidor Range**

65 to 72%

## **Food Storage Range**

50 to 55%

## **Bikram Yoga**

40%



**ThermoWorks**

[www.thermoworks.com](http://www.thermoworks.com)  
741 E. Utah Valley Dr.  
American Fork, UT 84003