

Smoke X2™ / Smoke X2™ Receiver

Sync Instructions

Smoke X2 and Smoke X2 Receiver come paired out of the box so you should only need to do this when replacing or adding Smoke X2 Receivers.

How to sync:

- With Smoke X2 powered on, press and hold the (⏻) button for 5 seconds until “SYNC” appears on the screen.
- Now that Smoke X2 is in SYNC mode, make sure Smoke X2 Receiver is powered on.
- Press and hold the VOL button for 5 seconds on Smoke X2 Receiver. The display should read “SYNC” for a short amount of time.
- Both Smoke X2 and Smoke X2 Receiver will beep and return to normal functionality signaling a successful pairing.

NOTE: To sync multiple Smoke X2 Receivers to one base, please follow the steps above on one Smoke X2 Receiver at a time. Putting Smoke X2 into Sync mode will not disable or interfere with previously synced Smoke X2 Receivers.

Go to www.thermoworks.com/smokex2 for additional product information and more tips for use.

www.thermoworks.com
741 E. Utah Valley Dr.
American Fork, UT 84003



For service or warranty:
1-800-393-6434
1-801-756-7705
techsupport@thermoworks.com