

TimeStick® Instructions

Instrument Operation

Install the CR2032 battery provided (“+” should be facing up) and the unit will turn on ready to use. Like a digital watch, TimeStick is always on. TimeStick has three modes: Clock, Timer (Count-Down), and Count-Up (works like a stopwatch).

While a COUNT-UP or COUNT-DOWN function is in operation an indicator will flash in other function screens.

Set the Clock

Values on the timer are displayed in the hr:min:sec format.

Press MODE until you are in the CLOCK function.

Press and hold START/STOP until the hours start to flash.

Adjust hours by pressing the CLEAR button.

Press START/STOP to save the hours and move onto minutes.

Adjust minutes by pressing the CLEAR button.

Press START/STOP to save the minutes and move onto seconds.

Adjust seconds by pressing the CLEAR button.

Press START/STOP to save adjustments and exit the edit mode.

Press the 12/24 button to switch between 12 hour and 24 hour clock mode (located on back panel).

Set the Timer

Press MODE until you are in the TIMER function.

With reference to the following examples, set the desired countdown times.

Press CLEAR to clear the display before setting new values

To set 12 seconds = press 1, 2

To set 12 minutes = press 1,2,0,0

To set 12 hours = press 1,2,0,0,0,0

To set 12 hours, 12 minutes = press 1,2,1,2,0,0

To set 12 hours, 12 minutes, 12 seconds = press 1,2,1,2,1,2

Start the Count-down Timer

Press START/STOP to begin the count-down.

You can pause a count-down by pressing START/STOP, resume by pressing START/STOP again.

When the timer reaches 00:00:00, the alarm will sound.

The timer will start to count-up showing the elapsed time since the alarm sounded. Press any button to mute the alarm and continue the count-up.

Stop the count-up by pressing START/STOP.

Memory

TimeStick will retain the last Timer value entered in memory. While in Timer mode, press START/STOP to recall the value. Press CLEAR to clear the display. This does not erase the value from memory.

Start the Count-up

Press MODE until you are in the COUNT-UP function.

Press CLEAR to clear the display.

Press START/STOP to begin count-up.

Press START/STOP at any time to stop count-up.

Extended Alarm Alert

To help preserve battery life, after one minute of sounding an alarm TimeStick will then go silent for 30 seconds, then sound again for 5 seconds. It will repeat this until the unit is silenced by a button push.

Lock Button Function

TimeStick was designed with a Lock function to help prevent accidental button presses. By pressing and holding the LOCK button, TimeStick will go into lock mode and disable all other button presses. To get out of LOCK mode press and hold the lock key until the indicator disappears. If timer expires while in the LOCK function only the LOCK button will silence the alarm.

Care and Cleaning


Be sure the battery cover and gasket are tightly secured after replacing the battery, otherwise water resistance may be affected.

Do not expose to temperatures over 104°F (40°C).

TimeStick is Splash-Proof, however avoid full submersion.

Specifications

Count-down Range	99 hours 99 minutes 99 seconds
Count-up Range	99 hours 99 minutes 99 seconds
Display Resolution	1 second
Alarm Sound Volume	70 dB at 11.8 inches (300mm)
Clock Accuracy	±1 second / day
Water Resistance	IP65
Battery	CR2032 x 1, included, 10,000 hours typical
Display Size	0.8 H x 0.8 W inches (20 H x 20 W mm)
Product Size	4.25 H x 1.2 W x 0.62 D inches (108 H x 31 W x 16 D mm)

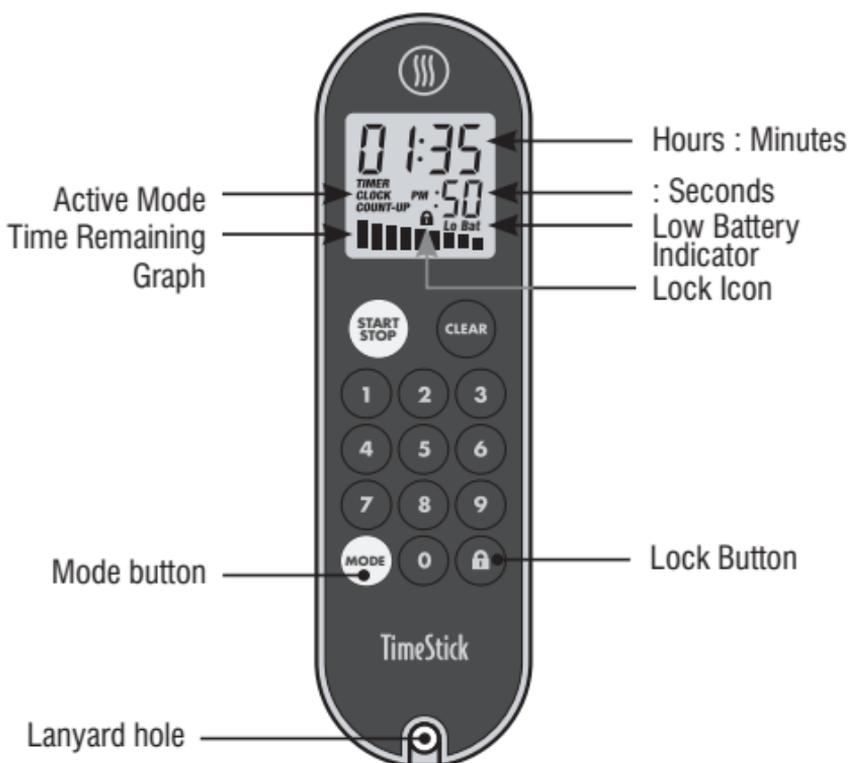

ThermoWorks

www.thermoworks.com
1762 W. 20 S. #100
Lindon, UT 84042

For service or warranty:
1-800-393-6434
1-801-756-7705
techsupport@thermoworks.com

P-12-017-M-02-e