

Smoke Gateway Operating Instructions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada Licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. [exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Special Notice

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

FCC ID: 2AI67-TMW017G / **IC:** 22116-TMW017G 



ThermoWorks

www.thermoworks.com
741 E. Utah Valley Dr.
American Fork, UT 84003

For service or warranty:
1-800-393-6434
1-801-756-7705
techsupport@thermoworks.com

P-15-012-02-b

Smoke Gateway connects your Smoke Professional BBQ Thermometer to the Smoke Gateway mobile app on your smartphone or tablet. Smoke Gateway pairs to your Smoke base unit, and then connects to your Wi-Fi. Only one Smoke base unit can connect at a time to a Smoke Gateway.

What's Included:

Smoke Gateway, lithium rechargeable battery (installed), power adapter, USB charging cable, and this instruction guide.

Set Up:

1. Download the Smoke Gateway mobile app from Apple App Store or Google Play.
2. Follow the on-screen instructions in the app to pair your Smoke Gateway to your Smoke base unit (via Radio Frequency [RF] wireless), and then connect it to your local Wi-Fi.

To Operate:

Press the power button to turn Smoke Gateway on (double blue flash).

Press and hold the power button for 3 seconds to power Smoke Gateway off (double red flash).

Smoke Gateway can run for up to 100 hours on battery power. Alternatively, Smoke Gateway will also run connected to mains power.

(Smoke Gateway ships with partial charge; it is recommended to charge before use)

To Charge:

When the battery is low, the LED will flash red twice every 2 seconds then turn off after 1 minute. Connect Smoke Gateway to mains power using the included power adapter and USB charging cable. When the unit is fully charged the LED will change from solid red to solid blue. Allow approximately 8 hours to fully charge. You can check the battery level of Smoke Gateway by going to 'Settings' on a single channel.

Transmission Distance:

Smoke Gateway should be located within 300-feet (line of sight) of the Smoke base unit for best results, and within range of your Wi-Fi network.

Hard Reset:

To perform a hard reset on Smoke Gateway, press the RESET button on the back of the device. Your connection settings will not be lost.

Firmware Updates:

 
Smoke Gateway will update itself automatically with the latest firmware when connected to Wi-Fi.

Care & Maintenance:


Power Smoke Gateway off when not in use to conserve battery power.
Store at room temperature in dry location.

LED Light:

When the unit is turned on and operating normally the LED will flash every 5 seconds. When flashing BLUE, everything is working properly. If flashing RED every 5 seconds, the connection to your Smoke base unit (RF) is not working properly. If flashing purple, Wi-Fi is not connected properly. During setup the LED light will flash per the app instructions.

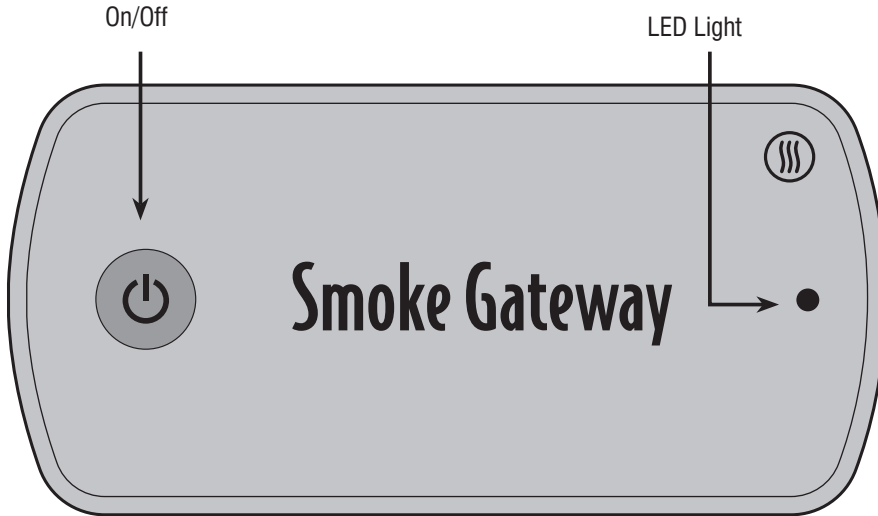

(Back)

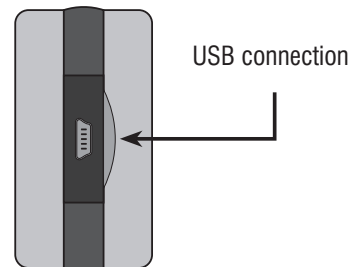 

(End)