OPERATION MANUAL

8689 pH Meter

PEN TYPE PH METER



((

ThermoWorks, Inc. 1762 W. 20 S. #100 Lindon, UT 84042 ph: 801-756-7705 www.thermoworks.com

INTRODUCTION

Congratulations on your purchase of this pen type pH meter. Please read the manual completely before using this meter. File and keep the manual for future reference. It is recommended that you soak the electrode for at least 30 min. before using to clear up the lazy effect or to make the electrode wet if the pH electrode dries out

Features:

- IP65 Waterproof housing.
- Dual display with ATC.
- Replaceable electrode
- Data hold to freeze readings.
- Pen size, easy to fit in pocket.
- Low battery indicator.
- Auto power off.
- C/F unit switchable.
- Power by 4pcs LR44 batteries.
- Multi points calibration.
- One touch only for calibration.

MATERIAL SUPPLIED

- √ The meter x 1
- This package contains: ✓ LR44 button batterv x 4
- ✓ Operation manual x 1
- √ Wrist strap x 1
- ✓ Color box or plain box x 1

POWER SUPPLY

The meter is powered by 4 pcs LR44 batteries. Check the battery when:


- First time use
- 2. The battery symbol appears on LCD
- 3. The meter will not power on

To install the batteries:

- 1. Turn off the meter.
- 2. Loosen the battery cover in counterclockwise direction.
- 3. Replace old batteries with four new button cells LR44.
- 4. Make sure the batteries are in place and the polarity is correct.
- Put back the battery cover and turn it tightly in clockwise direction.

NOTE:

- It is recommended to re-calibrate the meters after changing batteries.
- Remove battery from instruments that you do not plan to use for a month or more. Do not leave battery in instrument.

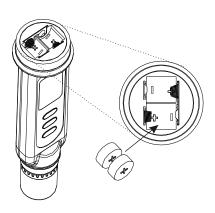

LCD DISPLAY



- -The 1st display shows the measured pH reading.
- -The 2nd display shows the temperature reading (degree C or degree F)
- -Cal=Calibration mode
- -HLD=Data hold -Battery icon to indicate low
- -Battery icon to indicate low power-uS/ppt/ppm/mS/mV are invalid

KEYPAD



-Press to freeze the current reading.
-Press again to release hold.

units in this pH pen

-Press to adjust while in setting or calibration mode.




- -Press to enter calibration mode.-Press to save and enter next step
- while in setting mode
 -Press to adjust while in calibration
 - -Press to adjust while in calibration mode



- -Press to power on/off the meter
- -Press >2 second to enter setting mode before power on.
- -Press with "**HOLD**" key to disable auto sleep function before power on.

OPERATION

- Remove the probe cover from meter.
 Retail Rotate the transparent cap to expose the electrode out, see 2
- Dip the electrode into the test solution.
 Press " Φ " to power on the meter
 and stir it to get a stable reading.

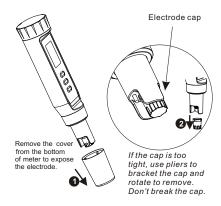

 "pH" flashes while the meter is in measurement mode. The LCD shows the measured pH and temperature. "pH" stop flash while the reading is stable.



4. Press "HoLD" key to freeze current readings. "HLD" appears on the LCD. Press "HOLD" key again to release.





5. Turn off the meter by pressing " button.

 Once finishing the measurement, clean the electrode, put back the transparent electrode cap and meter cover.

WARNING: For pH meters, please always keep the electrode wet to keep the electrode in a good storage condition.

- 7.Please see page 8 for the calibration procedures.
- 8.Please see page 6 for the setting program.

AUTO POWER OFF (SLEEP FUNCTION)

This meter will shut off automatically after 20 minutes of inactivity. For operating a longer period of time, you can disable the sleep mode.

To disable the auto power off:

Before power on, pressing " " " HOLD keys simultaneously until a "n" appeared on the screen and then release keys to return to normal mode.



NOTE: The sleep mode will reset after every power off.

PARAMETERS SETTING

Parameters setting function could help you to check or program your meter.

When meter is off, press " " key >1 sec. to enter setting mode."

(Probe slope and offset value)

After re-calibration, checking probe slope and offset value may help to confirm the necessity to replace the probe.


While doing 3 points calibration, two available slope values and one offset point.

Range 1(SL1): 0.00 to 2nd point Range 2 (SL2): 2nd point to 14.00pH. Offset point is at pH7

While doing 1 or 2 points calibration, the slope value SL1 equals to SL2. The offset point is still at pH7.


Be sure to change probe while the slope value is <75 or >115 (The unit is %). While the offset value is out of -60mV~+60mV, change the probe as well.

When meter is off, press " exp " key >1 sec. to enter setting mode. SL1 value will appear on LCD. Press " key to view the SL2 value. Press " key to view the offset value.




(Temp. Unit Setting)

To select the temp. unit (°C or °F), enter the setting mode first. Press " to select unit setting. Default unit flashes on LCD. Press " to change and press " to confirm."



Reset to default setting

To reset the meter to default setting, enter the setting mode first. Press " to select reset. Default "no" flashes on LCD. Press " to change and press " to confirm.



Before calibration, it is recommended that you RESET the meter to delete all old calibration information.

CALIBRATION MODE (CAL)

Caibration is necessary and should be done regularly. It is recommended that this be done everyday if the meter is used often. The unique calibration design of the meter features automatic buffer recognition to avoid errors

- Rinse the probe thoroughly with de-ionised water or rinse solution. Do not wipe the probe as this will cause a build-up of electrostatic charge on the glass surface.
- 2. Power on the meter.
- Dip the probe into the standard calibration buffer. The end of the probe must be completely immersed into the sample.
 Stir the probe gently to create a homogeneous sample. It is recommended to calibrate pH7 first and then 4 or 10pH for better accuracy result.
- 4. Press " key > 1 second to enter calibration mode. The "CAL" icon, auto recognized buffer value (see below table) and "pH" will all flash on primary LCD.

		NIST	
Temp.(°C)	pH4.01	PH6.86	PH9.18
0	4.01	6.98	9.47
5	4.01	6.95	9.38
10	4.00	6.92	9.32
15	4.00	6.90	9.27
20	4.00	6.88	9.22
25	4.01	6.86	9.18
30	4.01	6.85	9.14
35	4.02	6.84	9.10
40	4.03	6.84	9.07
45	4.04	6.83	9.04
50	4.06	6.83	9.01



If the probe is damaged or the buffer is not specified as following, the primary LCD will keep flashing unless you escape by turning off the meter.

The acceptable pH buffer range:

- -pH3.00~5.00
- -pH6.00~8.00
- -pH8.50~10.50
- If the probe successfully recognizes the buffer, the buffer pH value and "CAL" will stop flashing.



- 7. If your calibration buffer is not NIST, press " or " or " to adjust the calibrating point to the corresponding buffer value of specific temperature. The adjustable range is :3.00 to 5.00, 6.00 to 8.00, 8.50 to 10.50.
 - 8. Wait for 30 seconds, the meter completes the calibration automatically if the reading is stable enough.
 - Rinse the probe with de-ionized water or a rinse solution (tap water...) after calibration. Repeat step 3 ~ 8 to do multiple point calibration or exit by turning off the meter

PROBE CHANGE

It is recommended to change the probe when:

- 1. Slow response
- 2. Unstable reading
- 3. Slope value is <75% or >115% or the offset value is out of -60mV~+60mV

Purchase a compatible pH probe from the store where you bought the pH pen.




P/N: VZ86P8AZ Package: Pain box/manual Suitable for: 8689 pH pen

Three steps to change the probe:

Step 1: Loosen the washer Step2: Unplug the probe

Step3: Reverse steps to install new probe

NOTE: Be sure to calibrate the meter after changing the probe.

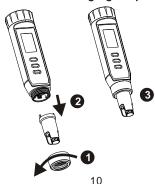

MAINTENANCE

- √Please always keep the pH glass bulb
 wet by using the cap to protect and
 store the electrode.
- ✓Always rinse the pH electrode in de-ionized water or rinse solution (tap water.....) before next use.
- √ Never touch or rub glass bulb in order to lengthen pH electrode life.
- ✓ Make sure the electrode is clean. Between measurements, rinse the electrode with deionised water. If the eletrode has been exposed to a solvent immiscible with water, clean it with a solvent miscible with water e.g. ethanol or acetone and rinse carefully with water.
- ✓ Store the electrode carefully.

TROUBLESHOOTING

- ◆ Power on but no display
 - 1) Make sure the duration of pressing the power key is more than 0.3 sec.
 - 2) Make sure the batteries are in place and make good contact and correct polarity.
 - 3) Remove batteries for one minute and reinstall again.

Slow response

- Clean probe by immersing the electrode in tap water for 10-15 min, then rinse thoroughly with distilled water or use a general purpose electrode cleaner.
- 2) Replace a new probe.

Unstable reading

- 1)Stir it to make a homogeneous solution.
- 2)Make sure electrode is completely immersed in solution.
- 3)Clean probe and re-calibrate.
- 4)Replace a new probe
- 5) Move to another room and try again.
- The reading is constant Check whether the reading is on HOLD Press ** Louis ** key to unlock the reading.

Error Code

E02:The value is below the lower limit

E03:The value is over the upper limit

E04:The Temp. error results in this error.

E13:Slope or offset value of pH probe is out of the range

Solution: Re-calibrate or replace a new probe or replace calibration buffer

E31:Measuring circuit failure

Solution: Power on meter four times, if error still appears, send back for repair

E32:Memory saving/reading failure

Solution: Power on meter four times, if error still appears, send back for repair

E33:Reference voltage failure

Solution: Power on meter four times, if error still appears, send back for repair

SPECIFICATION

SPECIFICATIONS 8687 8688 8689	8687	8688	8689
Accuracy ±	0.3pH	0.2pH	0.05рН
Cal.Point(4.7.10)	•	•	•
Auto Power Off	•	•	•
Measurement range 2.0-12.0 0.0-14.0 0.00-14.00	2.0-12.0	0.0-14.0	0.00-14.00
Temp. Accuracy	+ 1°C	1°C	± 0.5°C
Temp. Resolution	0.1°C/°F	0.1°C/°F 0.1°C/°F	0.1°C/°F
Resolution	0.1pH	0.1pH	0.01pH
Hold Data	•	•	•
Unit C/F switchable	•	•	•
ATC (0~50°C)	•	•	•
Auto recognize	•	•	•
Waterproof (IP65)	•	•	•
Size	176mm(L	W)mm6Ex(176mm(L)x39mm(W)x39mm(T)

- ✓ Operating Temp.: 0°~50°C (32~122°F) ✓ Operating Humidity: 0~80% RH
- ✓ pH calibration buffer suggested:
 - Standard USA buffersStandard NIST buffers
 - Standard DIN buffers
- ✓ Battery Life: >200 hrs continuous use

WARRANTY

The meter is warranted to be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty covers normal operation but does not cover battery, misuse, abuse, alteration, tampering, neglect, improper maintenance, or damage resulting from leaking batteries. Proof of purchase is required for warranty repairs . Warranty is void if the meter used to be taken apart.

CONTACT

ThermoWorks, Inc. 1762 W 20 S #100

Lindon, UT 84042 ph: 801-756-7705

fax: 801-756-8948 www.thermoworks.com