


# TempTest™ Blue

## Care and Use Card

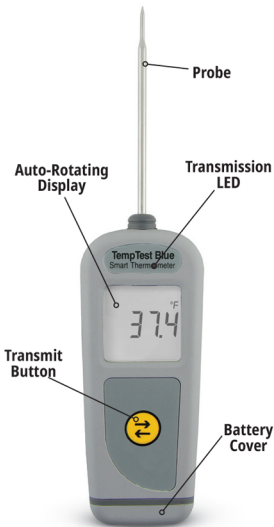

- Clean entire probe shaft with probe wipe after each use.
- Clean instrument body with damp soapy cloth and dry thoroughly after each use. (Don't use a wipe containing IPA on instrument housing).
- Don't pry, jab or force probe tip into food.
- Don't puncture containers or lift food with probe.
- Don't drop or rest on surfaces above 122°F (50°C).
- Store in drawer or wall bracket when not in use.
- Don't overtighten battery cover screw.

---

For questions, call ThermoWorks  
Tech Support at 385-330-0591  
[techsupport@thermoworks.com](mailto:techsupport@thermoworks.com)



# ThermoWorks