

MODEL

Precision
Precision Plus
Reference

ORDER CODE

222-553
222-550
222-555



ThermoWorks

SPECIFICATIONS**Precision / Precision Plus Thermometers**

Measuring Range -328 to 1562°F (-200 to 850°C)
Accuracy (Precision) ±0.4°F (±0.2°C) meter only
Resolution (Precision) 0.1°
Sensor (Precision) 3 or 4-wire RTD Class A, 100ohms
Accuracy (Precision Plus) ±0.1°F (±0.05°C) meter only
Resolution (Precision Plus) 0.01° Auto-Ranging to 0.1° above 550°F (300°C)
Sensor (Precision Plus) 3 or 4-wire RTD 1/10 DIN, 100 ohms
Probe Interchangeable
Auto-Off After 10 min. to save battery life, can be disabled
Battery 3 x AAA, 1,000 hrs.
Operating Range -4 to 122°F (-20 to 50°C)
Certificate NIST-traceable certificate included

Reference Thermometer

Measuring Range -328 to 400°F (-200 to 200°C)
Accuracy ±0.05°F (±0.03°C)
Resolution 0.01°
Probe 4W RTD 1/10 DIN, fixed
Battery 3 x AAA, 1,000 hrs.
Operating Range -4 to 122°F (-20 to 50°C)
Certificate UKAS Accredited Certificate included
Auto-Off 10 minutes

Precision & Reference Thermometers

ACCESSORIES/RELATED ITEMS

Standard Protective Boot
(THS-830-227)



Rubber Boot w/ Probe Holder
(THS-830-255)



SST Wall Bracket w/Probe Holder
(THS-832-050)



Duracell Procell AAA Battery, 4-pack
(PC2400)



Made in the UK

PT100 to BS EN 60751



ThermoWorks

ThermoWorks, Inc.
Utah, U.S.A.

Ph: 801-756-7705 Fax: 801-756-8948
www.thermoworks.com



Operating Instructions

INSTRUMENT OPERATION - Connect a probe via the socket located on the top of the instrument (where applicable). Screw the collar of the plug, finger-tight to ensure a secure connection (do not over tighten). The instrument is switched on by pressing the ON/OFF button. Apply the tip of the probe to the substance, medium, or surface to be measured. The instrument reading may take a few seconds to stabilize, depending on the nature of the measurement and sensitivity of the probe.

HOLD (PRECISION, PRECISION PLUS ONLY)

Press the HOLD button to freeze the display. Press again to continue measuring.

CHANGE FROM FAHRENHEIT TO CELSIUS

Press and hold the ON/OFF button for 5 seconds at start up and the displayed temperature will change from °F to °C.

MAX/MIN (PRECISION, PRECISION PLUS ONLY)

Press the MAX/MIN button to display the values. The instrument retains the max/min values when switched off. To reset, press the MAX/MIN button for three seconds, 'rst' will be displayed.

TRIM (PRECISION, PRECISION PLUS ONLY)

Press the MAX/MIN and ON/OFF buttons at start-up for five seconds to enter (Offset is displayed). Press HOLD (up) or MAX/MIN (down) to set the trim value (maximum of $\pm 3.6^{\circ}\text{F}$). Press the ON/OFF button to save the value and exit Trim mode.

AUTO-OFF (PRECISION, PRECISION PLUS ONLY)

The instrument will switch off automatically after 10 minutes. To disable auto off press the HOLD button while switching on the instrument (this is reset when the instrument is switched off).

OPEN CIRCUIT/FAULTY PROBE - If the probe has developed an 'Open Circuit' fault the instrument will display 'Err'.

SENSORS - This instrument should only be used with PT100 (platinum resistance probes, $0^{\circ}\text{C} = 100$ ohms) BS EN 60751 fitted with suitable miniature plug (where applicable).

BATTERY REPLACEMENT - The instrument will display 'LO BAT' to warn that the batteries will need changing soon. The instrument continues to measure accurately but after further usage the instrument will display 'flat bat' and shutdown. Replace the batteries with three AAA batteries located under the rear cover that is held in place by a single screw.

INSTRUMENT CLEANING - Clean the entire probe shaft with a probe wipe after each use to prevent bacteria growth. Clean instrument body with a damp, soapy cloth and dry thoroughly. **(NOTE: cleaning wipes and solvents containing Isopropyl Alcohol (IPA) may cause damage to the instrument enclosure and display screen, and will void the warranty)**

GUARANTEE - This instrument carries a two-year warranty against defects in either components or workmanship. During this period, products that prove to be defective will, at the discretion of ThermoWorks, be either repaired or replaced without charge. This warranty does not apply to probes, where a six-month period is offered. Full details of liability are available within ThermoWorks' Terms & Conditions of Sale at www.thermoworks.com/product-warranty.


For warranty, service, and technical assistance, please contact ThermoWorks' Technical Support at (385) 330-0591 or email at techsupport@thermoworks.com.

Probe Wiring Diagram

PT100 Binder Plug Wiring

Precision / Precision Plus Thermometers

Pin	Function
1	+
2	+
3	-(3 Wire)
4	-(4 Wire)
5	Shield

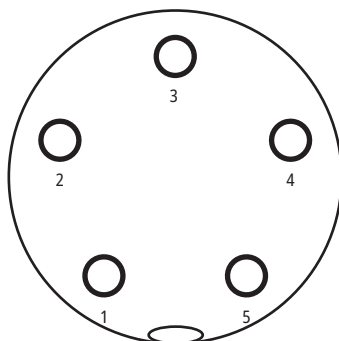

Pin numbering as viewed from rear