

THEN DOWNLOAD AND INSTALL YOUR SOFTWARE & USB DRIVER

Windows ™ XP/VISTA/7

- 1. Visit www.thermoworks.com/software and click 'download' on the EasyLog USB Software. 2. Click on the downloaded file and hit extract all files.
- 3. Open the EasyLogUSB file and double-click on 'Setup.'
- 4. Click on 'Run.'



5. Click 'Next'



6. Read the 'IMPORTANT NOTICE', select 'I agree' and 'Next'



7. Click 'Install'

YOUR DATA LOGGER IS READY FOR USE

- Ensure the battery is correctly installed.
- Insert the data logger into an available USB port on your PC.
- Double click on the EasyLog USB icon on your Windows™ desktop. This will load the configuration software. Setup the data logger for a new log, download a data logger that has been recording, M



view previously saved data in graph format, and check the current status of the attached data logger (including the serial number).

- When setup is complete, the data logger should be removed from the USB port to begin recording. If you would like advice on how best to use the data logger for a particular application, please contact your nearest ThermoWorks representative.
- Do not leave your data logger in the USB port as this will cause some of the battery capacity to be lost (with the exception of TW-USB-1-RCG; see '1. First Install Your Battery' for further information).

FIRST INSTALL YOUR BATTERY

TW-USB-1, TW-USB-1-LCD, TW-USB-2, TW-USB-2+, TW-USB-2-LCD, TW-USB-2-LCD+, TW-USB-TC, TW-USB-TC-LCD

Before using the data logger you will need to insert the 3.6V 1/2AA battery provided, following the instructions below. Replacement batteries available from www.thermoworks.com, PN: BAT 3V6 1/2AA.



TW-USB-1 PRO

Before using the data logger you will need to insert the 3.6V 2/3AA High Temperature battery provided, following the instructions below. Replacement batteries available from: www.thermoworks.com, PN: BAT 3V6 2/3AA H TEMP.



TW-USB-1-RCG BATTERY IS PREINSTALLED

To charge the battery, connect to USB port until green LED shows.



8. Click 'Yes'




9. Click 'Finish'



10. Click 'Install'



11. You have successfully installed the necessary software and driver for your TW-USB data logger. An 'EasyLog USB' icon will be placed on your desktop.

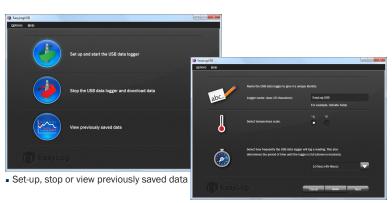

• Name your logger and select a sample rate

SPECIFICATIONS

Part No	Function	Range	Accuracy (overa	all error) Max.	Readings	Battery	Battery Life*
TW-USB-1	Temperature	-35 to 80°C (-31 to 176°F)	±1°C (±2°F)		16,382	3.6V ½AA	1 year
TW-USB-1-LCD	Temperature with LCD	-35 to 80°C (-31 to 176°F)	±0.5°C (±1°F)	±1.5°C (±3°F)	16,382	3.6V ½AA	1 year
TW-USB-1-PRO	Extended Temperature	-40 to 125°C (-40 to 257°F)	±0.2°C (±0.4°F)		32,510	3.6V ² ⁄ ₃ AA	3 years
TW-USB-1-RCG	Temperature with rechargeable battery	-20 to 60°C (-4 to 140°F)	±1°C (±2°F)		32,510	Lithium Ion	1 month (rechargeable)
TW-USB-2	Temperature, Humidity & Dew Point	-35 to 80°C (-31 to 176°F) 0 to 100%RH	±0.5°C (±1°F) ±3%RH	±2°C (±4°F) ±6.0%RH	16,382 16,382	3.6V ½AA	1 year
TW-USB-2+	Increased Accuracy Temperature, Humidity & Dew Point	-35 to 80°C (-31 to 176°F) 0 to 100%RH	±0.3°C (±0.6°F) ±2.0%RH	±1.5°C (±3°F) ±4.0%RH	16,382 16,382	3.6V ½AA	1 year
TW-USB-2-LCD	Temperature, Humidity and Dew Point with LCD	-35 to 80°C (-31 to 176°F) 0 to 100%RH	±0.5°C (±1°F) ±3.0%RH	±2°C (±4°F) ±6.0%RH	16,382 16,382	3.6V ½AA	1 year
TW-USB-2-LCD+	Increased Accuracy Temperature, Humidity and Dew Point with LCD	-35 to 80°C (-31 to 176°F) 0 to 100%RH	±0.3°C (±0.6°F) ±2.0%RH	±1.5°C (±3°F) ±4.0%RH	16,382 16,382	3.6V ½AA	1 year
TW-USB-TC	Thermocouple (J, K and T-type)	-200 to 1350°C (-328 to 2462°F) (K-type) -200 to 1190°C (-328 to 2174°F) (J-type) -200 to 390°C (-328 to 734°F) (T-type)	±1°C (±2°F)	±2°C (±4°F)	32,510	3.6V ½AA	6 months
TW-USB-TC-LCD	Thermocouple with LCD (J, K and T-type)	-200 to 1350°C (-328 to 2462°F) (K-type) -200 to 1190°C (-328 to 2174°F) (J-type) -200 to 390°C (-328 to 734°F) (T-type)	±1°C (±2°F)	±2°C (±4°F)	32,510	3.6V ½AA	6 months

^{*}Depending on logging rate, ambient temperature, and use of alarm LED

LED FLASHING MODES

LCD INDICATORS (TW-USB-1-LCD, TW-USB-2-LCD, TW-USB-2-LCD+ & TW-USB-TC-LCD ONLY)

TW-USB-1		TW-USB-2, TW-USB-2+, TW-USB-2-LCD & TW-USB-2-LCD+		TW-USB-1-LCD, TW-USB-1-RCG, TW-USB-TC & TW-USB-TC-LCD		DISPLAY AND STATUS FUNCTIONS	I		
٥,	Green double flash Delayed start	ሉ	Green triple flash Logger full, no alarm on the channel	φ	Green double flash Every 20 seconds: logger full, no alarm	TW-USB-1-LCD & TW-USB-2-LCD Maximum logged Relative Humidity	Display	Logger Status	Explanation
٩	Red double flash High alarm	ሉ	Red triple flash Logger full, alarm on the channel	٥	Green single flash Every 30 seconds: delayed start Every 20 seconds: low battery, logging, no alarm	value symbol symbol*	d5 P5	Delayed Start	This is shown when the logger is set to start at a specific data and time*
99	Orange double/single flash Memory full	٩,	Green double flash Delayed start		Every 10 seonds: logging, no alarm Red/Green single flash	Negative symbol — HE S°C°F			
٥	Green single flash Logging, no alarm	٥	Green single flash Logging, no alarm	99	Every 20 seconds: logger full, last value equal to or exceeds the low or high alarm	Minimum logged Reading Temperature value symbol scale		Push to Start	This is shown when the logger is setup for "Push to start" logging
٥	Red single flash Low alarm	٥	Red single flash Logging, low alarm on the channel	٩	Red double flash Every 10 seconds: logging, high alarm Every 20 seconds: logging, high alarm, low battery	*TW-USB-2-LCD only	109	Logging	This is shown when the logiger is running in "LO off" mode, and the button is pressed. The display clears again after three seconds If the logger has not been set to log and the button is pressed, three dashes are displayed for three seconds
6	Orange single flash every 60 sec Low battery	ď	Red double flash Logging, high alarm on the channel	٩	Red single flash Every 10 seconds: logging, low alarm	TW-USB-TC-LCD Temperature scale symbols			
0	No LEDs flash Logger stopped or battery empty	0	No LEDs flash Logger stopped or battery empty		Every 20 seconds: logging, low alarm, low battery				
				0	No LEDs flash LEDs disabled during configuration to save battery power and increase logging life /logger stopped /	0000. 5 AT	* If the logger is set to "	LCD off" or "LCD on for 30 seconds	" mode, then this will only be shown after the